

M-BUS converter MBRS-128

M-BUS Series

Instruction Manual

MBRS-128 is microcontroller-based bidirectional full-duplex **M-bus** to **RS-232C** converter. It can supply power to maximum of 128 m-bus slave devices. MBRS-128 is used in building and industrial tax meters and/or sensors remote reading networks. It has output short circuit protection. It is mounted on standard M35 DIN rail.

1. General technical data

- max. number of m-bus slave devices - 128
- max. output current - 200 ± 5 mA
- output current protection level - 225 ± 5 mA
- nominal output voltage (mark) - 35.5 VDC ± 1 V
- zero output voltage '0' (space) - 22-25 VDC
- power supply voltage - 150-250 VAC (200-350 VDC)
- max. power consumption < 11.5 W (@ 128 m-bus slaves connected)
- ambient temperature, operating - -20÷+50 °C
- ambient temperature, storage - -50÷+90 °C
- air humidity - 40÷90 %
- dimensions (H/W/D) - 105/107/74 mm
- IP protection class - IP30
- max. transmissible signal baud rate - 4800 bps
- max. distance between master and slave in the network - 600 m
- display - 7 LEDs (on, protection, bus, overload, collision, RX, TX)
- weight - 340 g

2. MBRS-128 operation

MBRS-128 begins operation immediately after power-up. The sequence is the following:

Initialization mode (0.2-0.3 s)

- In the first 0.2-0.3s the MBRS-128 initializes. During initialization the output is shut down and therefore output voltage is 0 V. LEDs 'on' (turned on) and 'prot' (protection) are turned on.
- Then the output is enabled and the network current consumption is measured. The 'prot' LED goes out, LEDs 'bus' (output enabled) and 'TX' (transmitting mark) are turned on. On short circuit the output is shut down, LED 'prot' is turned on and LEDs 'bus' and 'TX' are turned off. Then MBRS-128 waits for some seconds before attempting to power the network again. If the attempt is unsuccessful (i.e. the short circuit is still present) the whole sequence is repeated again.

Normal operation

MBRS-128 measures the current consumption of the network. After the consumption exceeds 200mA the 'over' (overload) LED is turned on. If the consumption further increases and exceeds 225mA the output is disabled until current consumption level is restored to normal levels. MBRS-128 can be connected to a computer (or other device such as modem, transceiver, etc.) through its RS-232C interface. Thus it is possible to access the slave devices in the network. The device, connected to the RS-232C port of MBRS-128 can access every slave device in the network, can issue commands and collect data. In this case MBRS-128 connects all the devices in the network to the "reading" device, maintaining all the communication in the network. The data is transmitted without any delay. When transmitting data to the network, the 'TX' LED blinks and when transmitting data from the network, the 'RX' LED blinks. Full-duplex communication is possible. When collision is detected (simultaneous transmission of more than one slave device in the network), the 'coll' (collision) LED is turned on. However, the data is sent through the serial port.

3. Mounting and electrical connections

MBRS-128 should be mounted on standard M35 din-rail. All connections should be made with isolated multi-wire cables with cross section 0.5mm²÷2.5mm². All the connections are shown in the figure and the tables below:

C1 'Power' – 3P terminal block

No	Description
1, 3	Power input L, N
2	Power Grounding input PE

C2 'M-bus' – 2P terminal block

No	Description
1	M-bus output, +
2	M-bus output, -

C3 'RS-232C' – RJ-45

No	Description
1, 4, 6, 7, 8	Not connected
2	RXD
3	TXD
5	GND

4. Warranty

The warranty of the device is limited to 2 years from the date of sale. If the device shows any defect or malfunctions during that period, the manufacturer is obligated to repair the device in its own service for manufacturer's expense, or, if the repair is impossible, to replace the device with new one. The transportation costs to the manufacturer's service are due to the client. The warranty voids if this manual's instructions are not met, warranty seals are removed or the device was opened by unauthorized by the manufacturer personnel.

Serial number:.....

Date of sale:.....

Signature:.....

5. The package contains

- MBRS-128 - 1 pc.
- Instruction manual - 1 pc.
- Data cable (DB9F to RJ-45) 1 m – 1 pc.

6. Manufacturer

Gineers Ltd.
7 "Iskarsko shausse" blvd, TCE, building 4
1528 Sofia, Bulgaria
tel./fax (+359-2) 9758105
URL: <http://www.gineers.com>
e-mail: office@gineers.com

